

Director's Handles




Directors Handles

QUICK START GUIDE

© 2021 SmallHD, LLC. All rights reserved.

Physical Properties

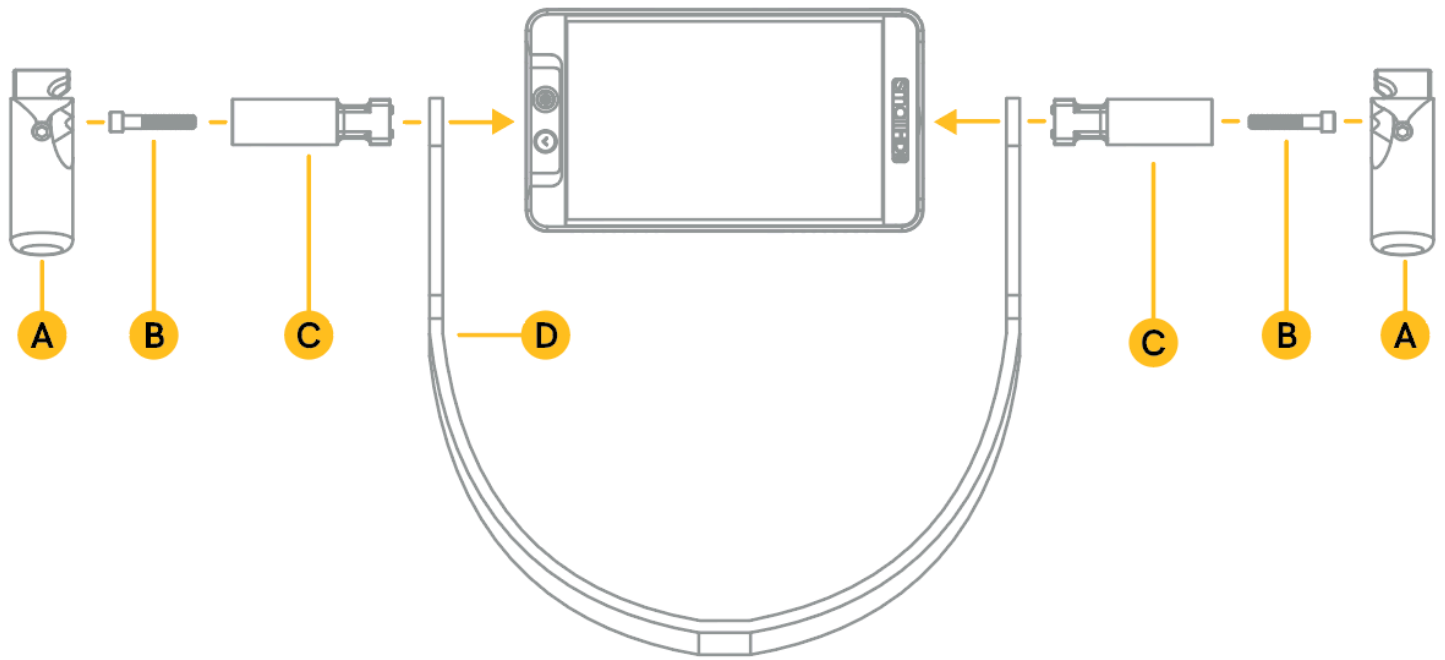

A. Grip

B. Screw

C. Handlebar

D. Neck strap

Installation Instructions

1. Loop the neck strap (D) onto both handlebars (C).
2. Use the location pins to align the handlebars to the mounting points on each side of the monitor.
3. Insert the screws (B) into the handlebars and tighten them using the 3/16 Allen wrench.
4. Attach the grips (A) to each handlebar using the 5mm Allen wrench.